

5 В		
GND		
GND	Приемопередатчик	GND
R1OUT	RS-232	R1IN
T1IN	dmitry@bravikov.pro	T1OUT
GND		GND
R2OUT		R2IN
T2IN		T2OUT